

Rider 11 C

Spare parts

Ersatzteile

 
Pièces détachées

Reserve onderdelen


Repuestos

Reservdelar

A

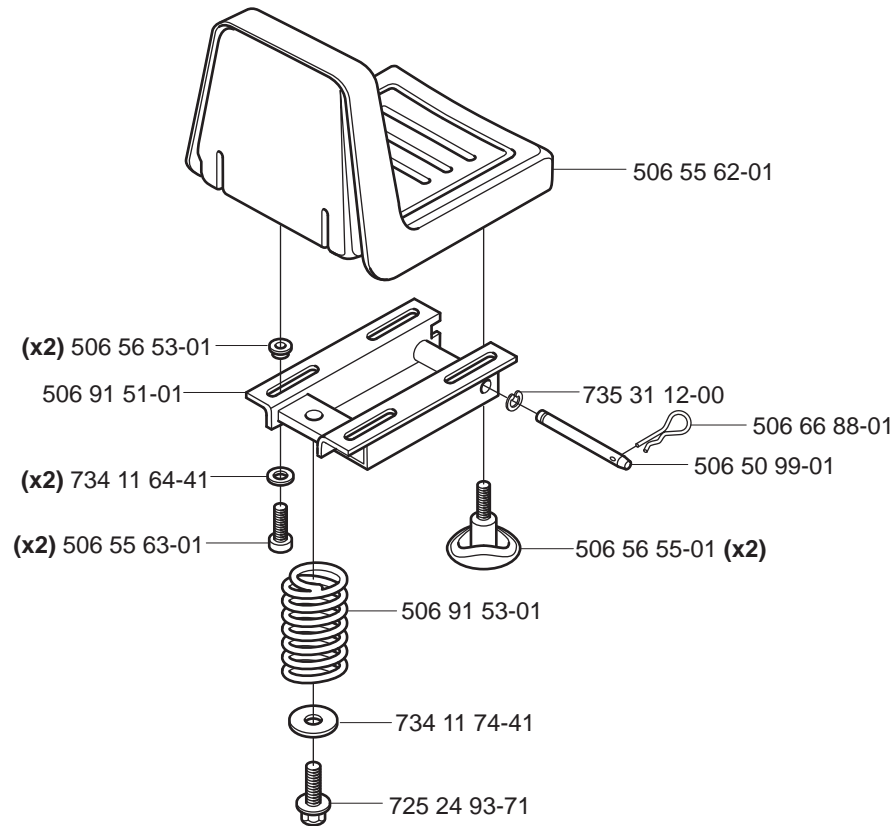


B

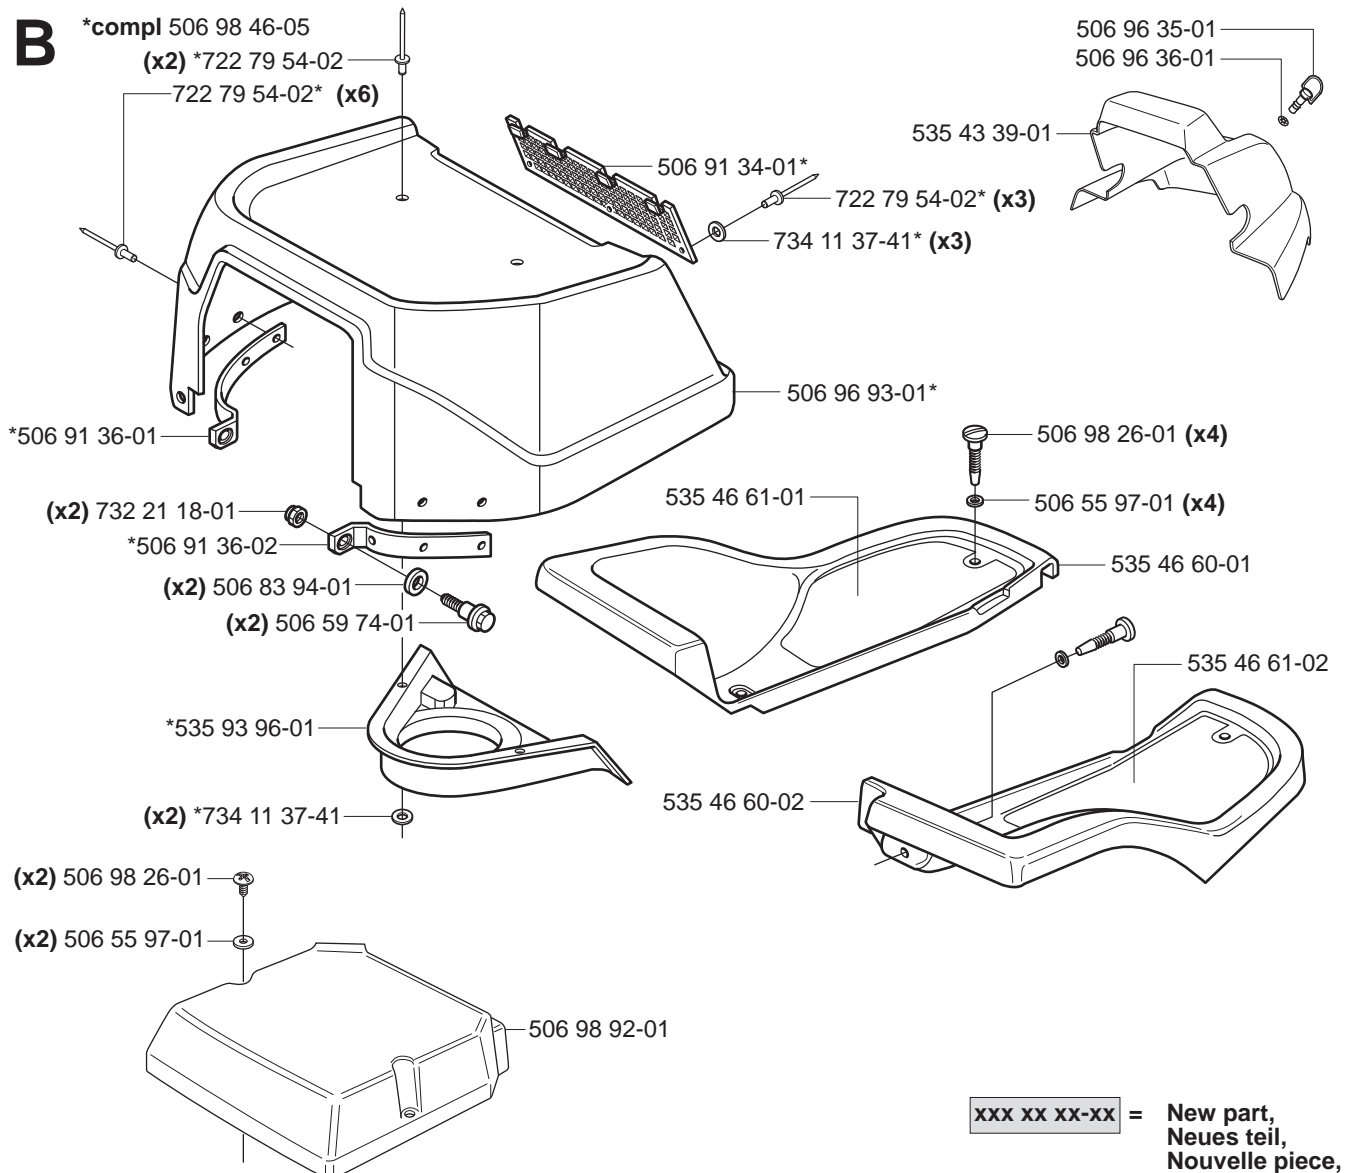 


xxx xx xx-xx = New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

 C

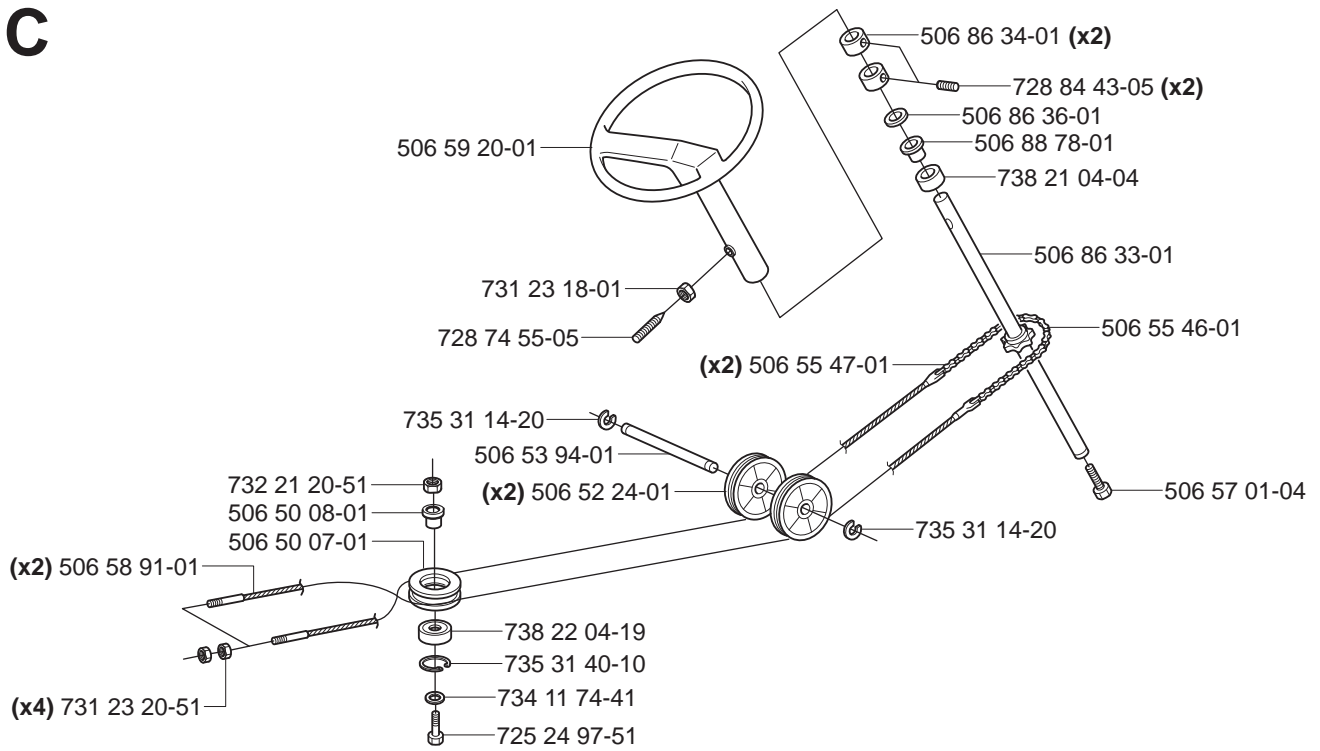

D

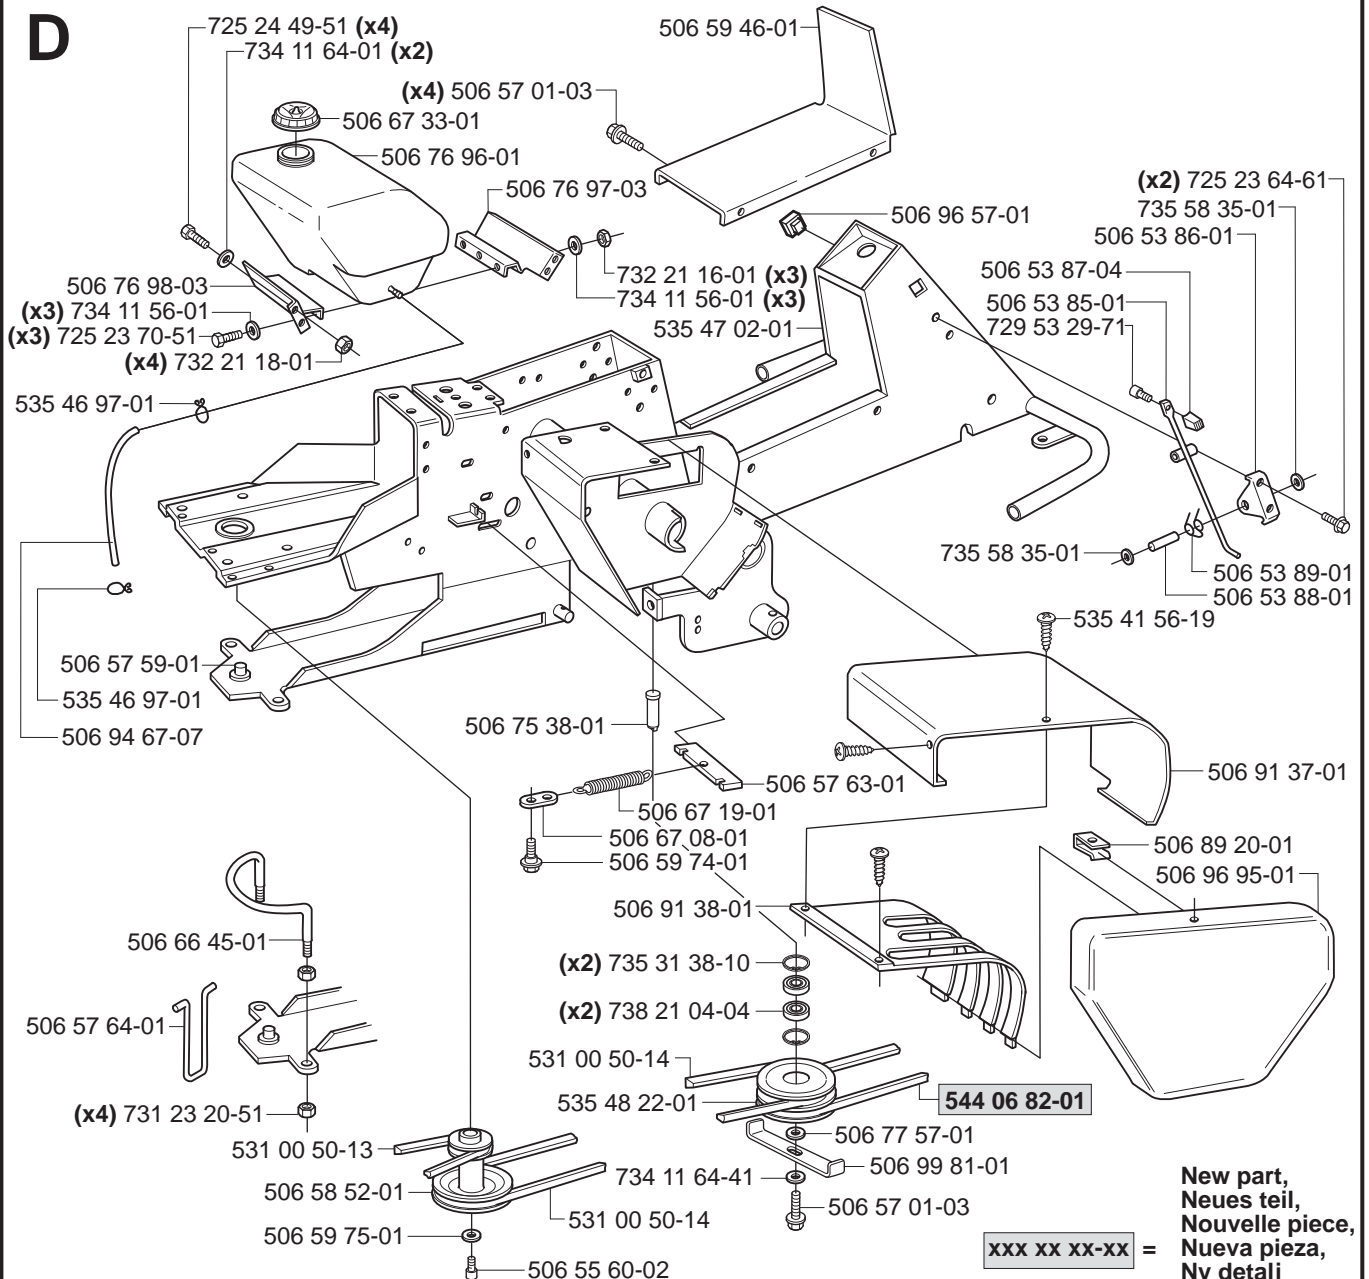 


New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj


xxx xx xx-xx =

E

 *compl 544 12 62-01 (x2)

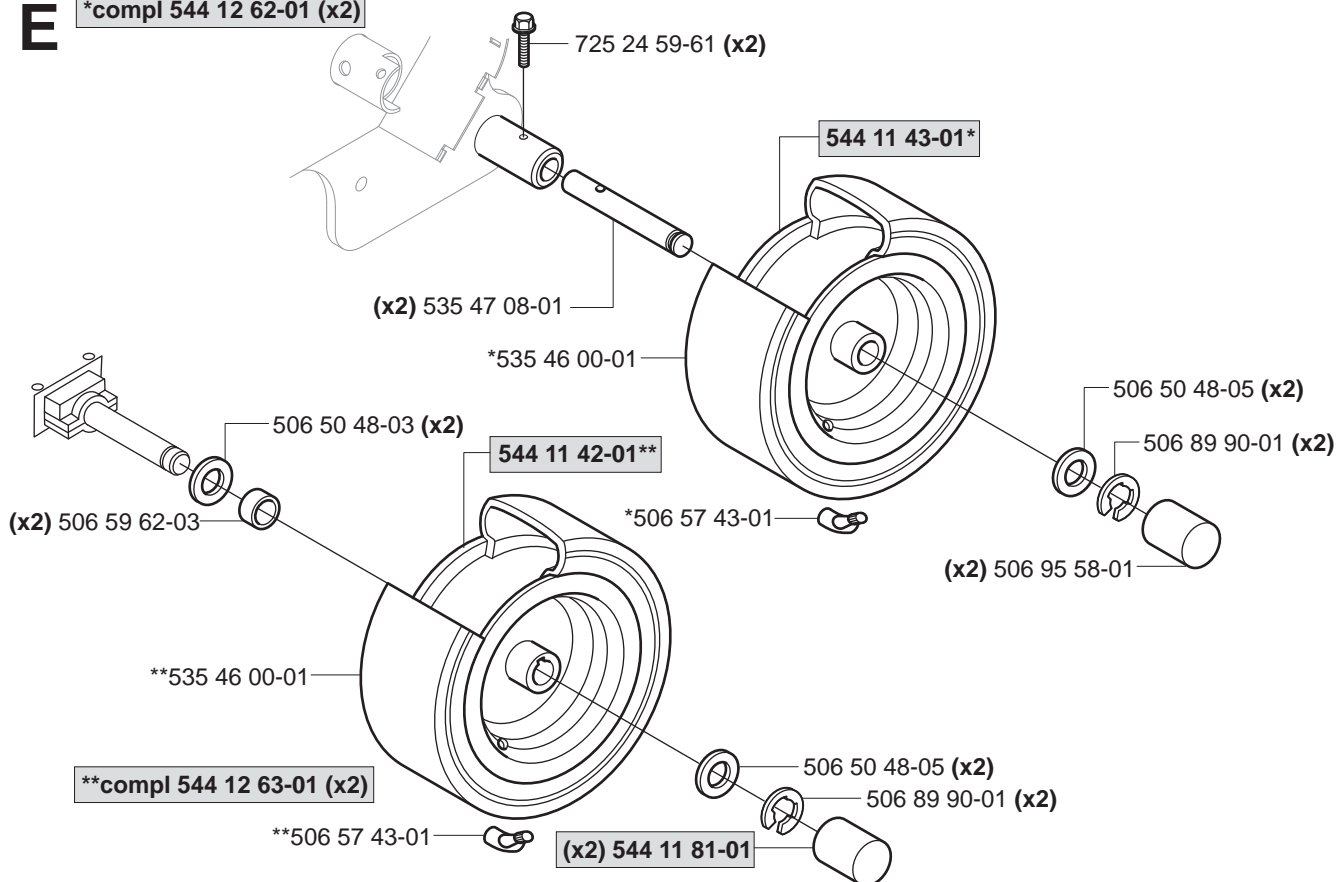


F

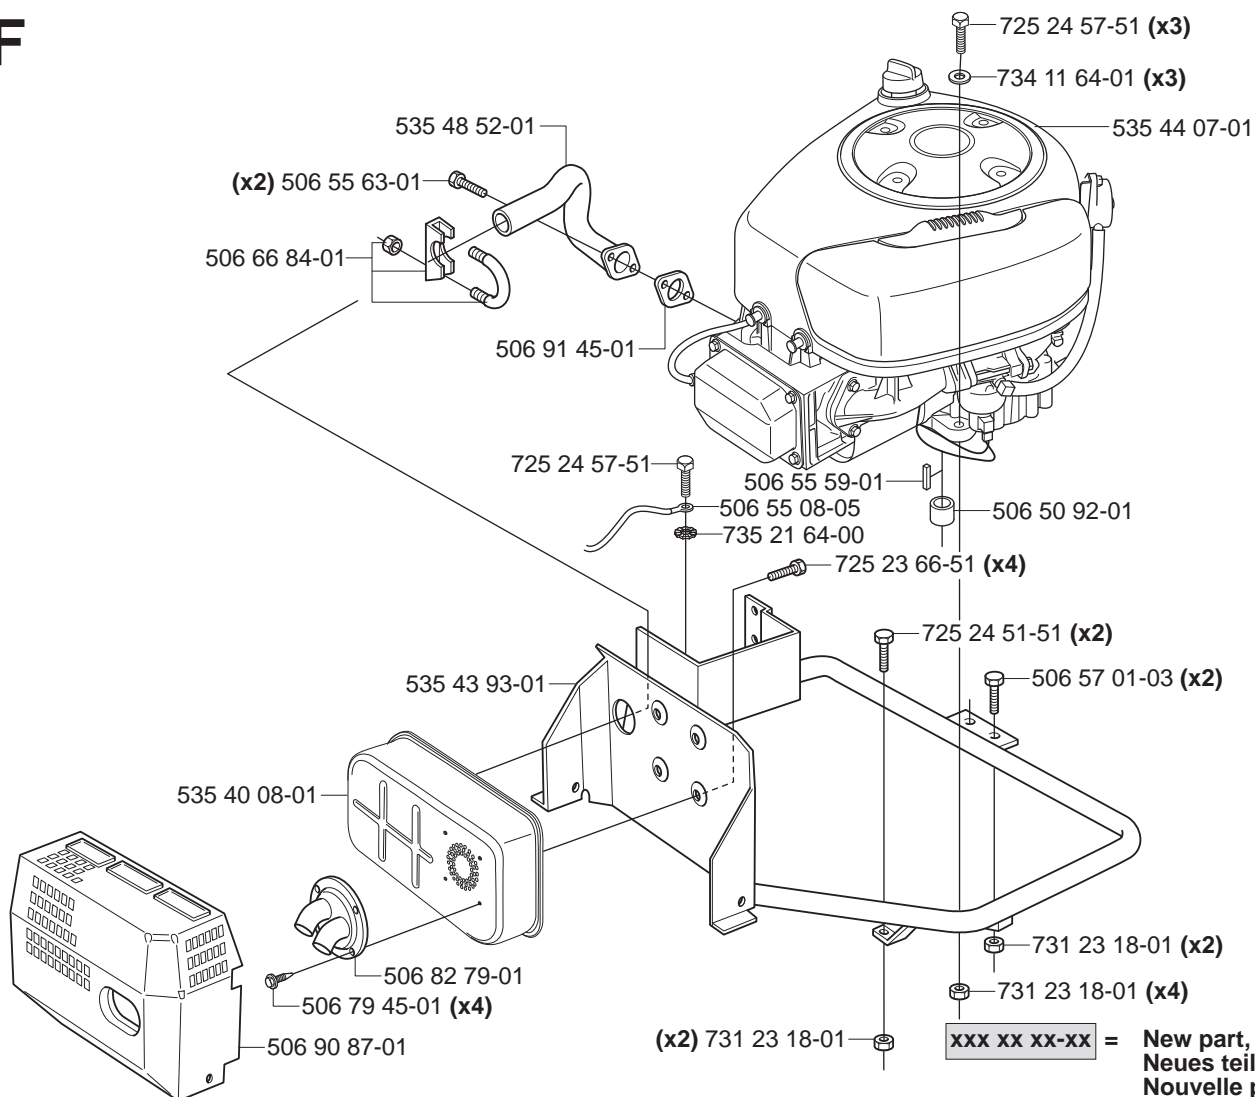 


xxx xx xx-xx = New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

 G

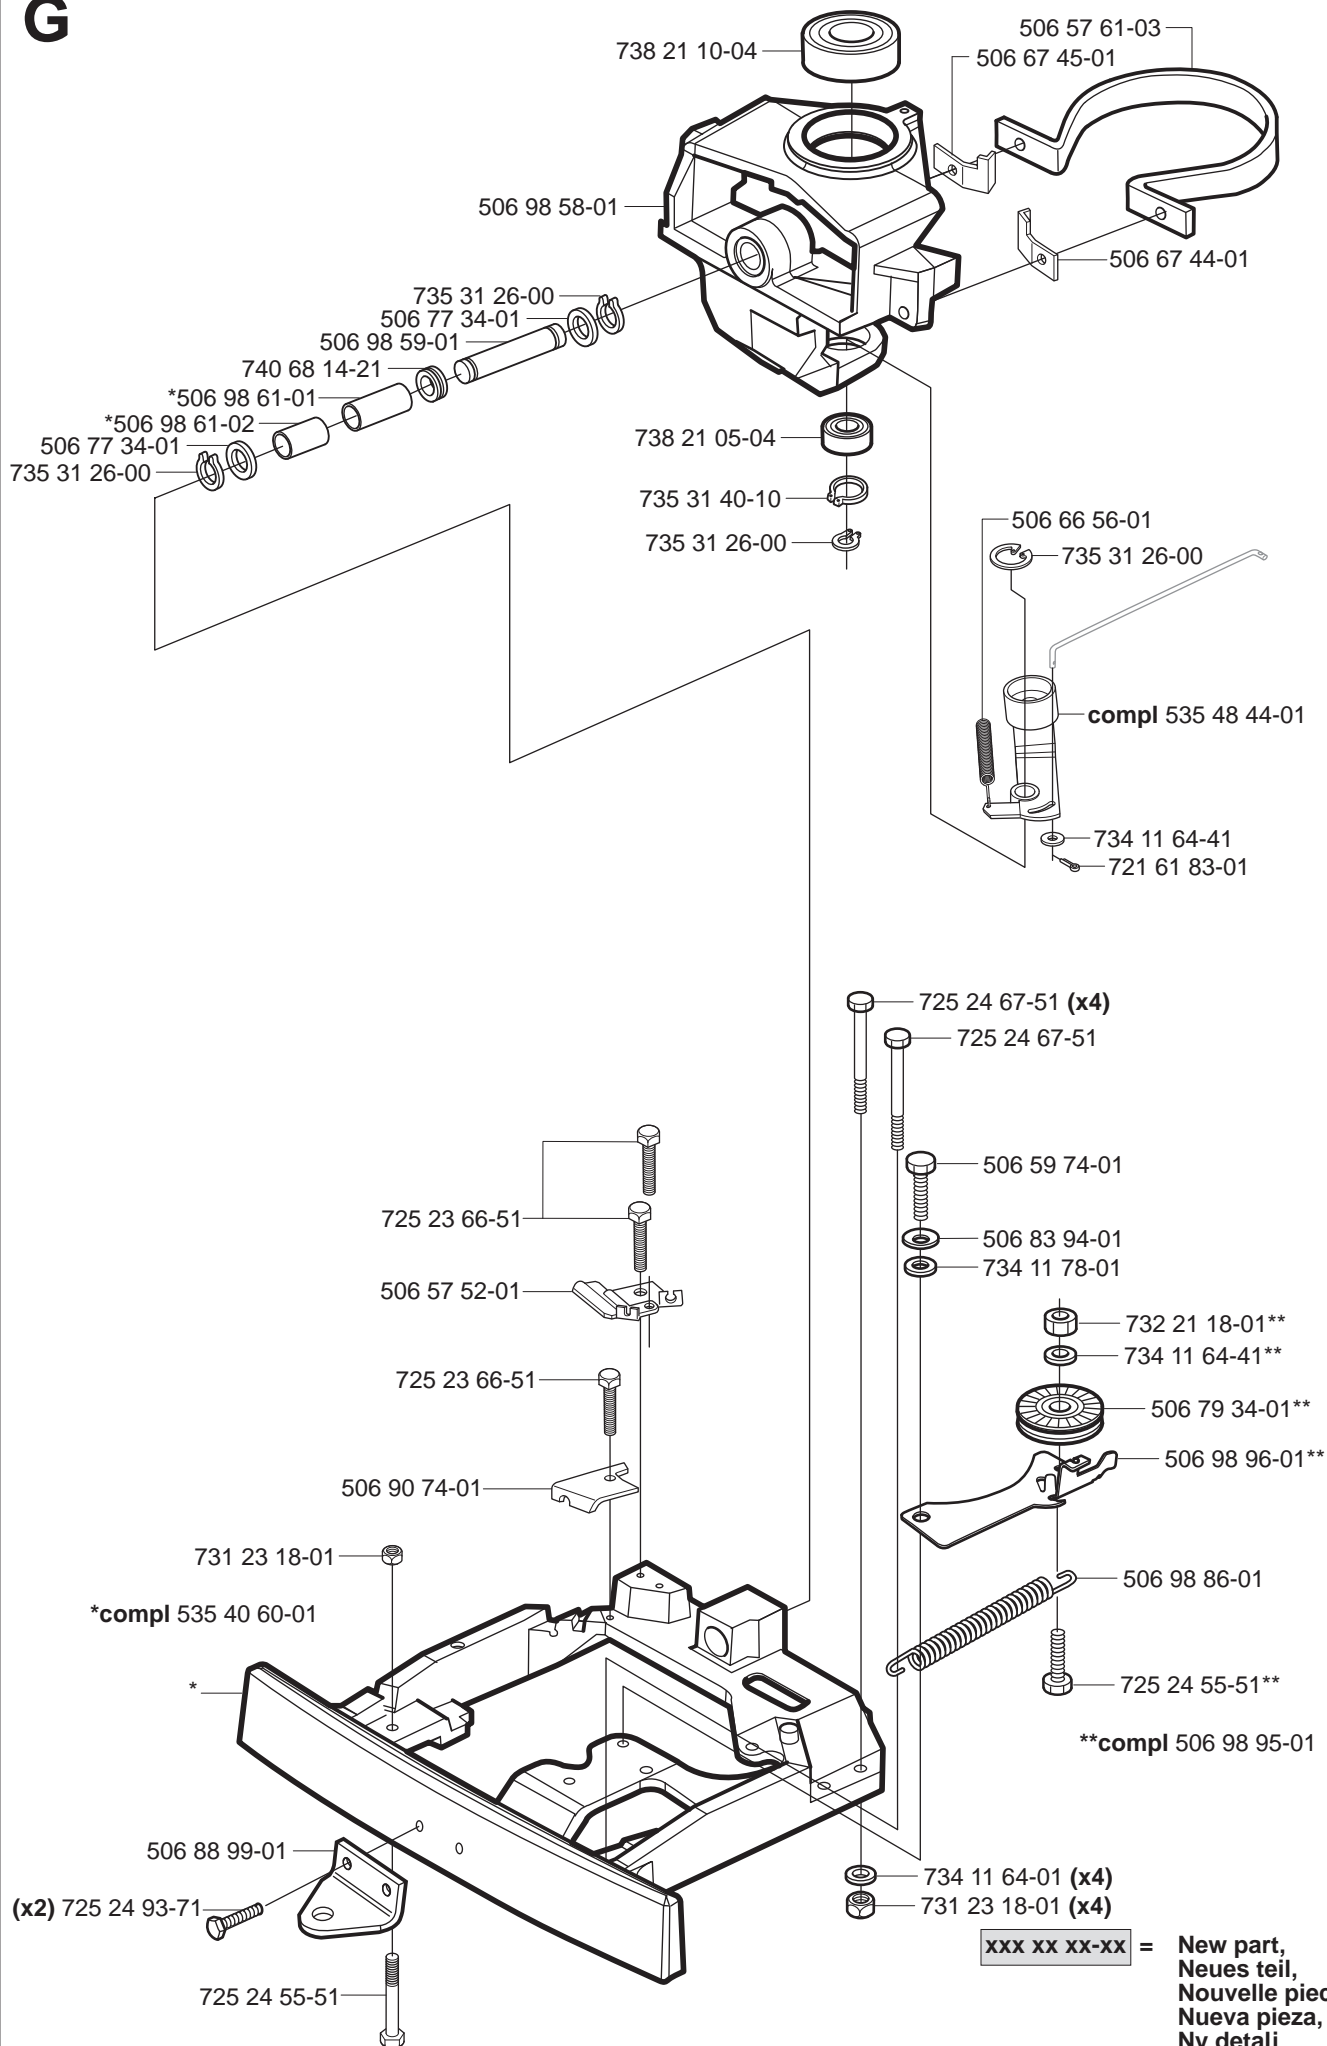


H

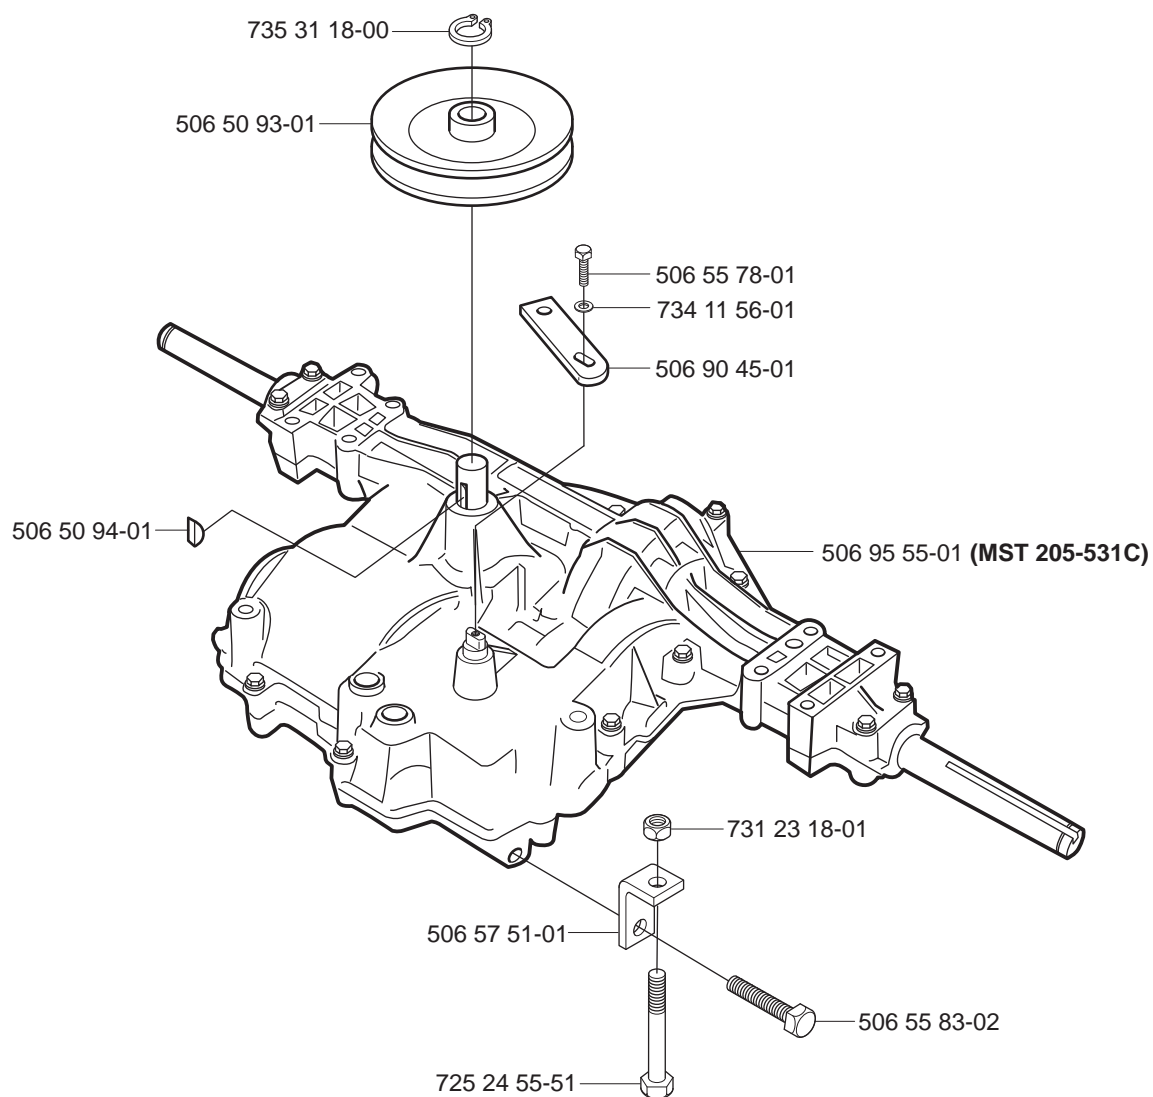 


xxx xx xx-xx = New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

J

 *compl 544 13 23-01

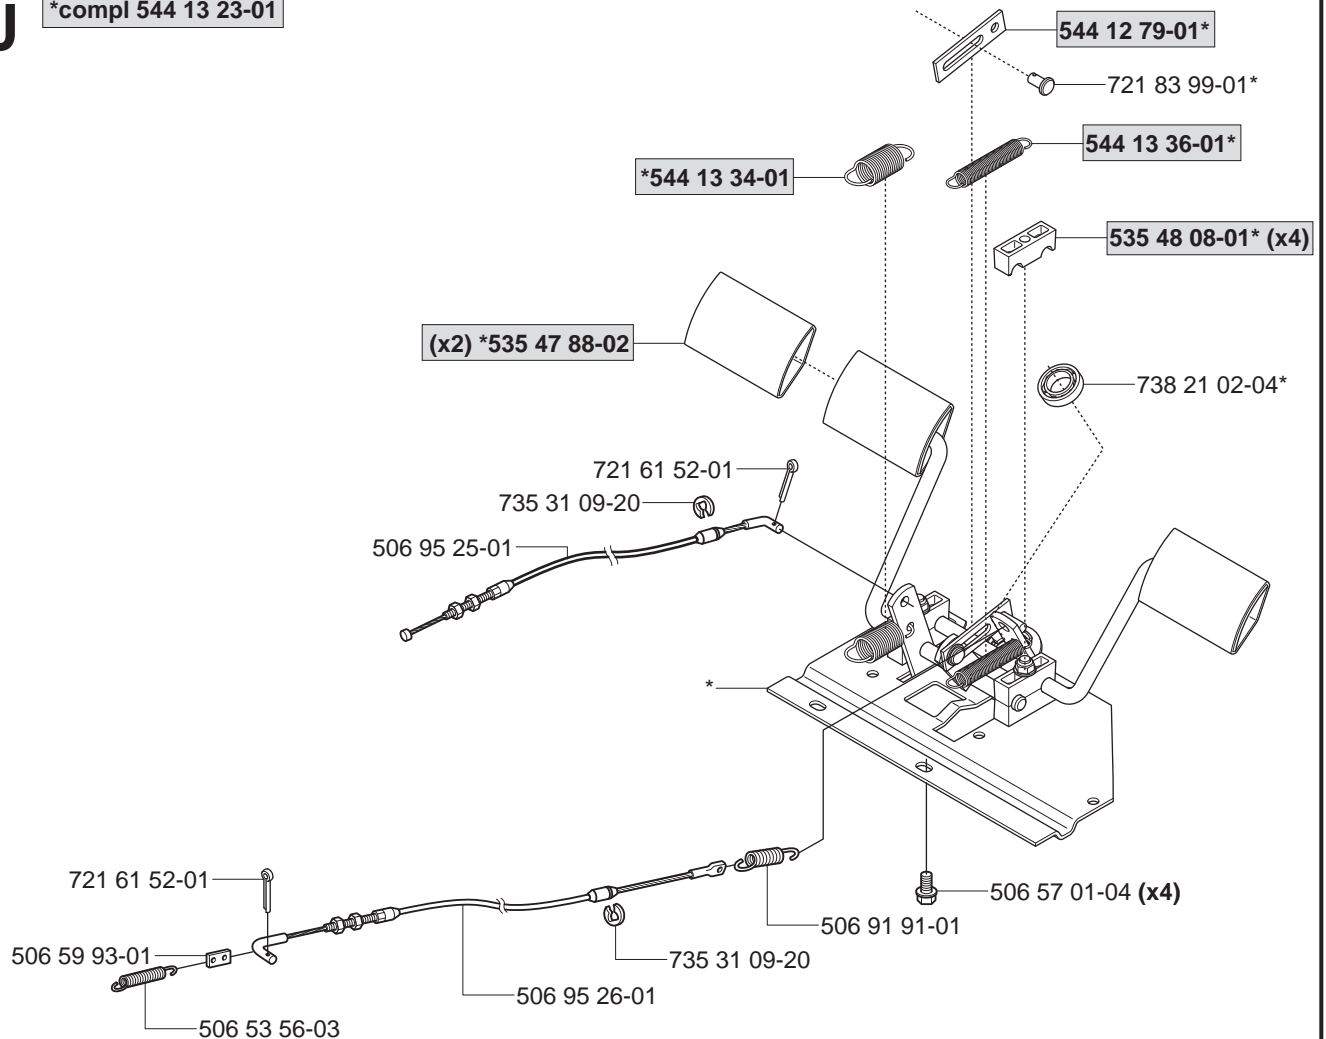


K

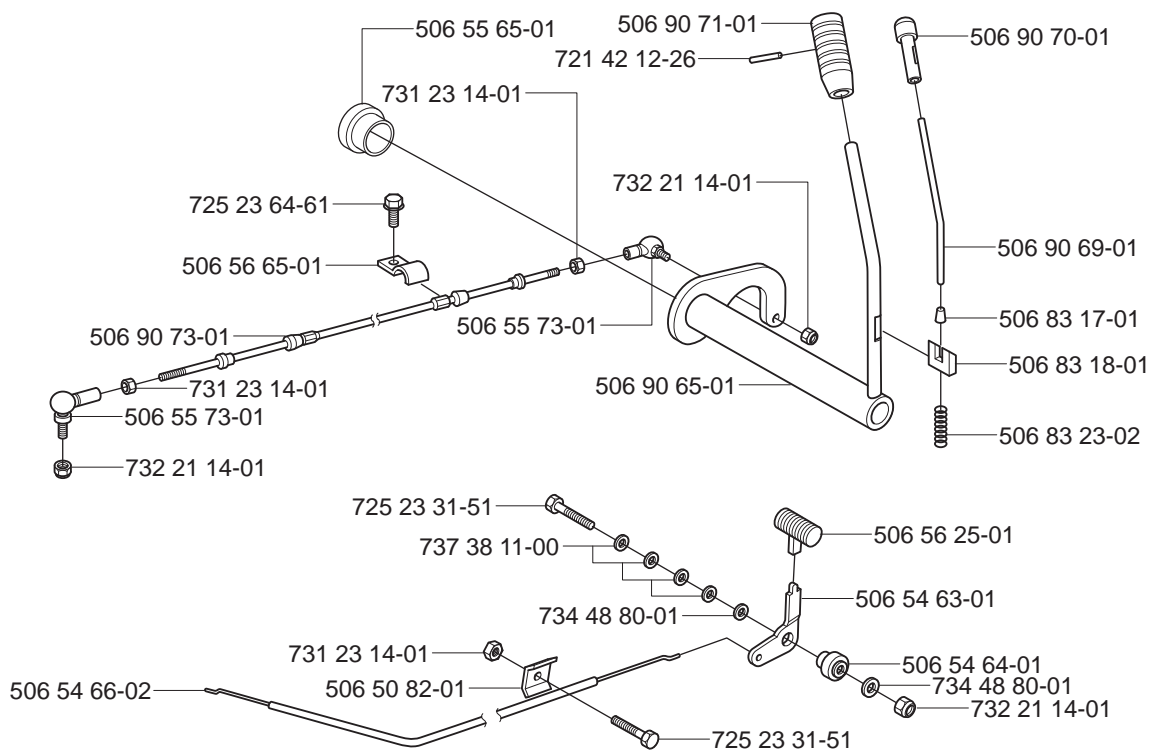 


xxx xx xx-xx = New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

 
L

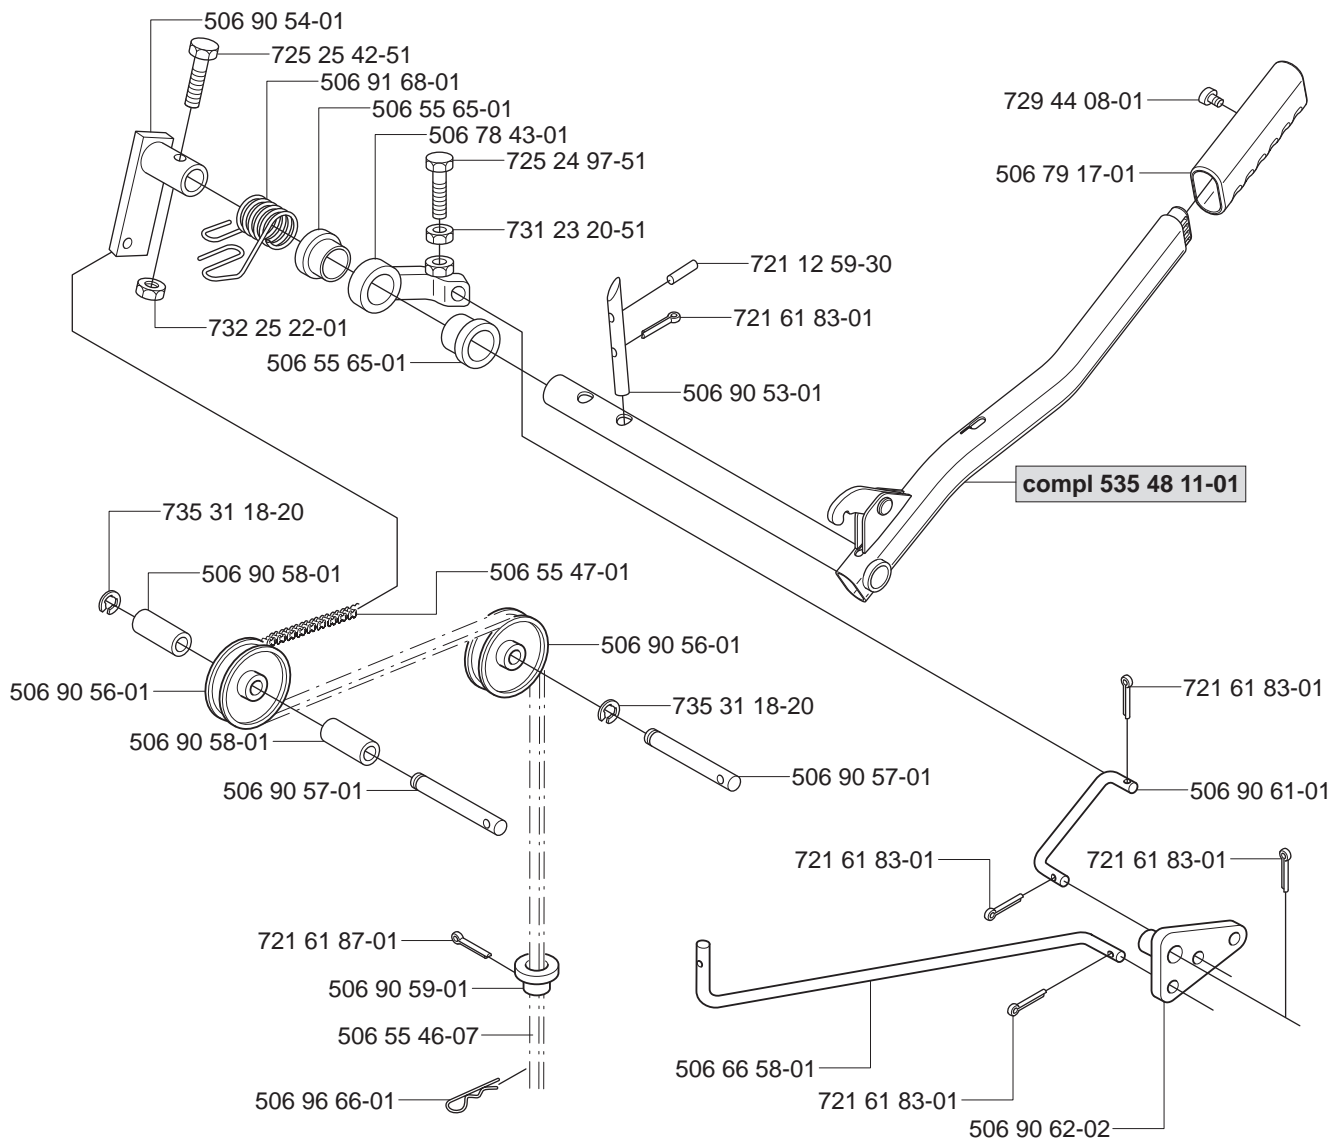

M

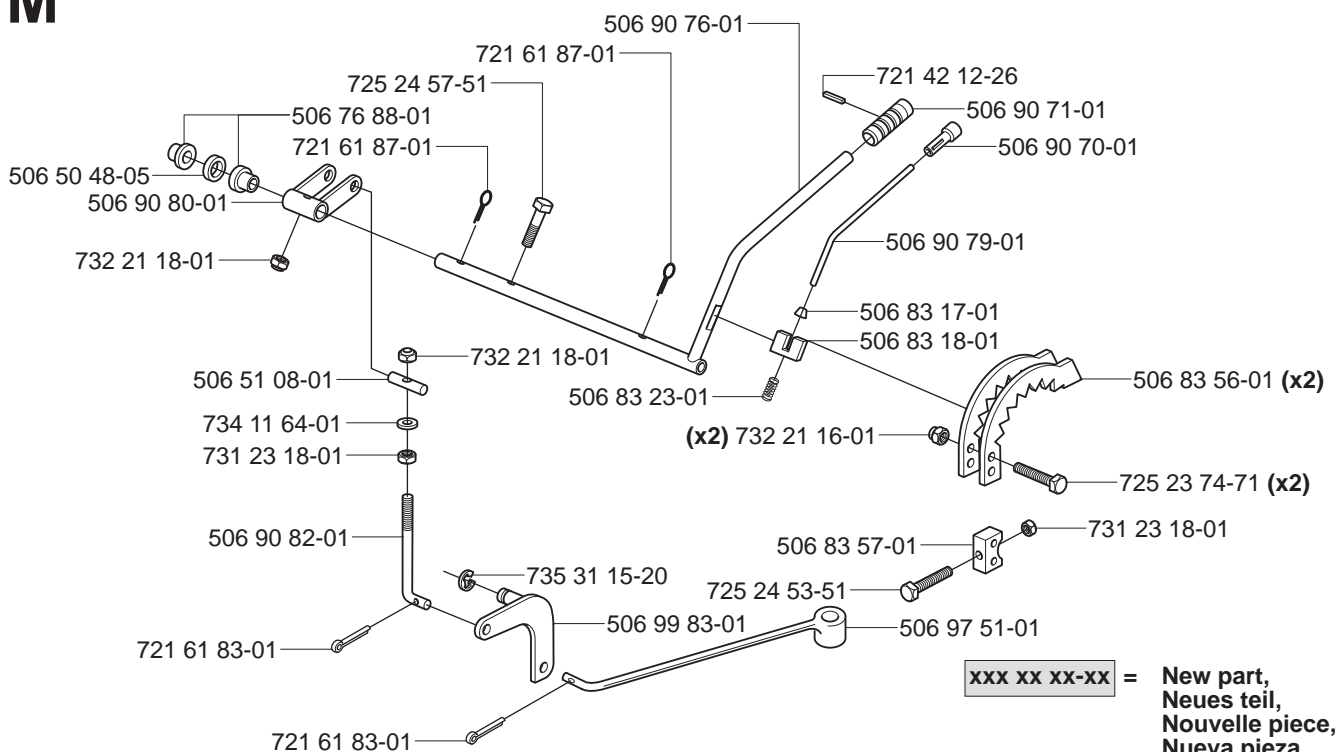 


N

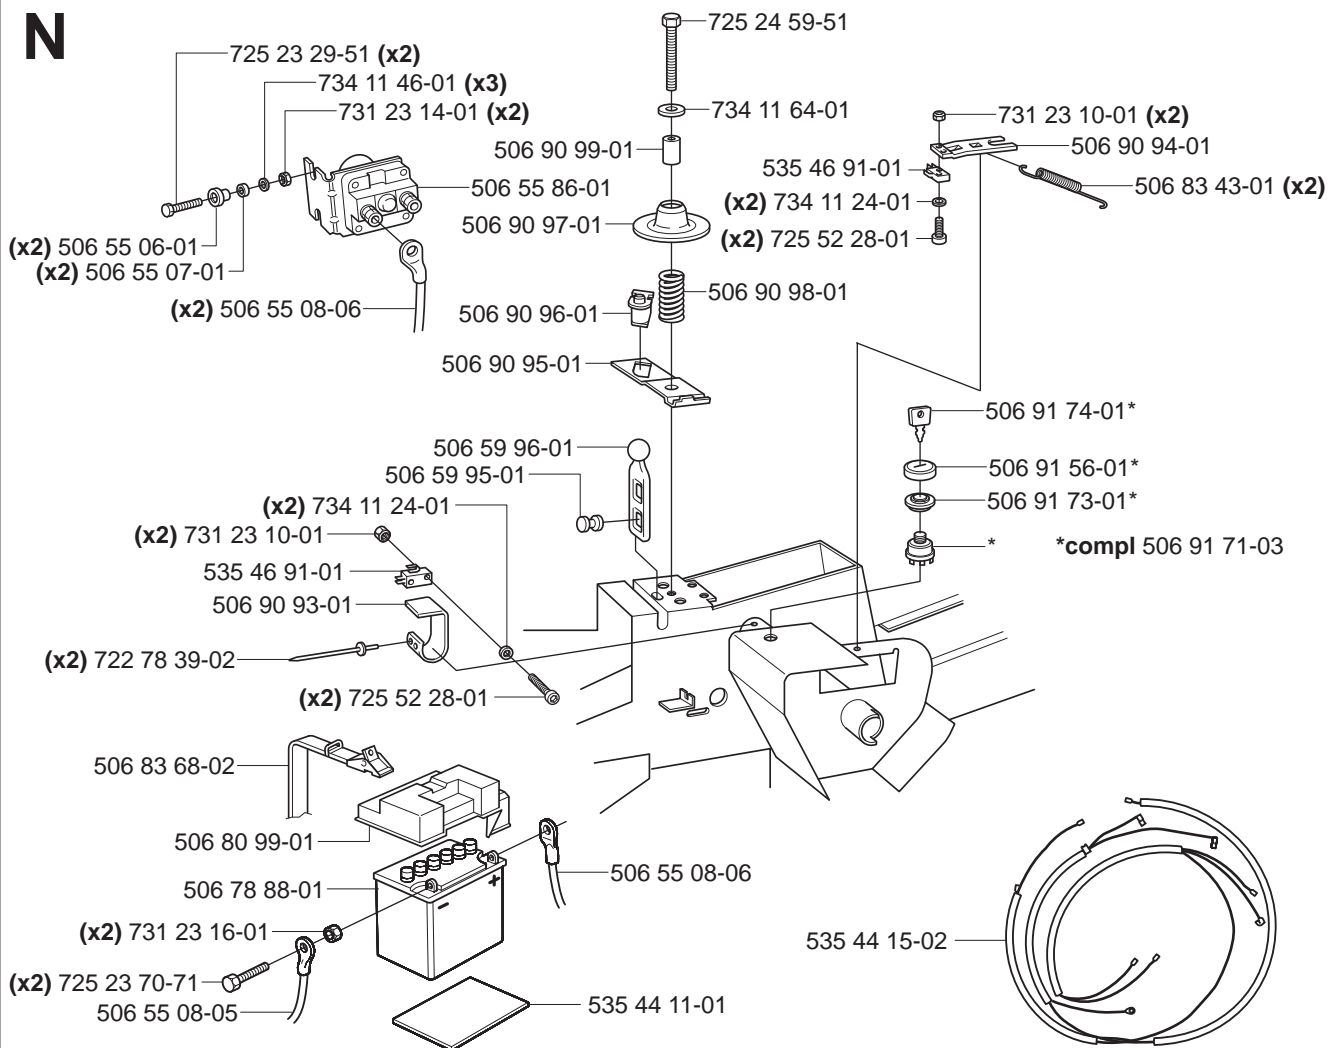 

P

 Warning
 506 94 40-01

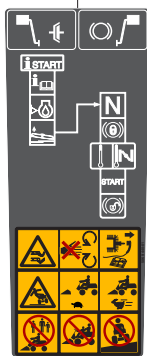


535 43 20-01



506 99 96-01



 506 84 28-01



506 84 28-03



506 58 45-01



535 45 00-01



535 44 98-01

Husqvarna

506 91 57-01



506 91 57-02



506 96 13-01



535 44 99-01

Husqvarna

535 45 01-01

Husqvarna

535 45 01-01

Husqvarna

544 07 24-01


Rider 11C

544 07 24-02

Rider 11C

xxx xx xx-xx = New part,
 Neues teil,
 Nouvelle piece,
 Nueva pieza,
 Ny detalj

 
Q

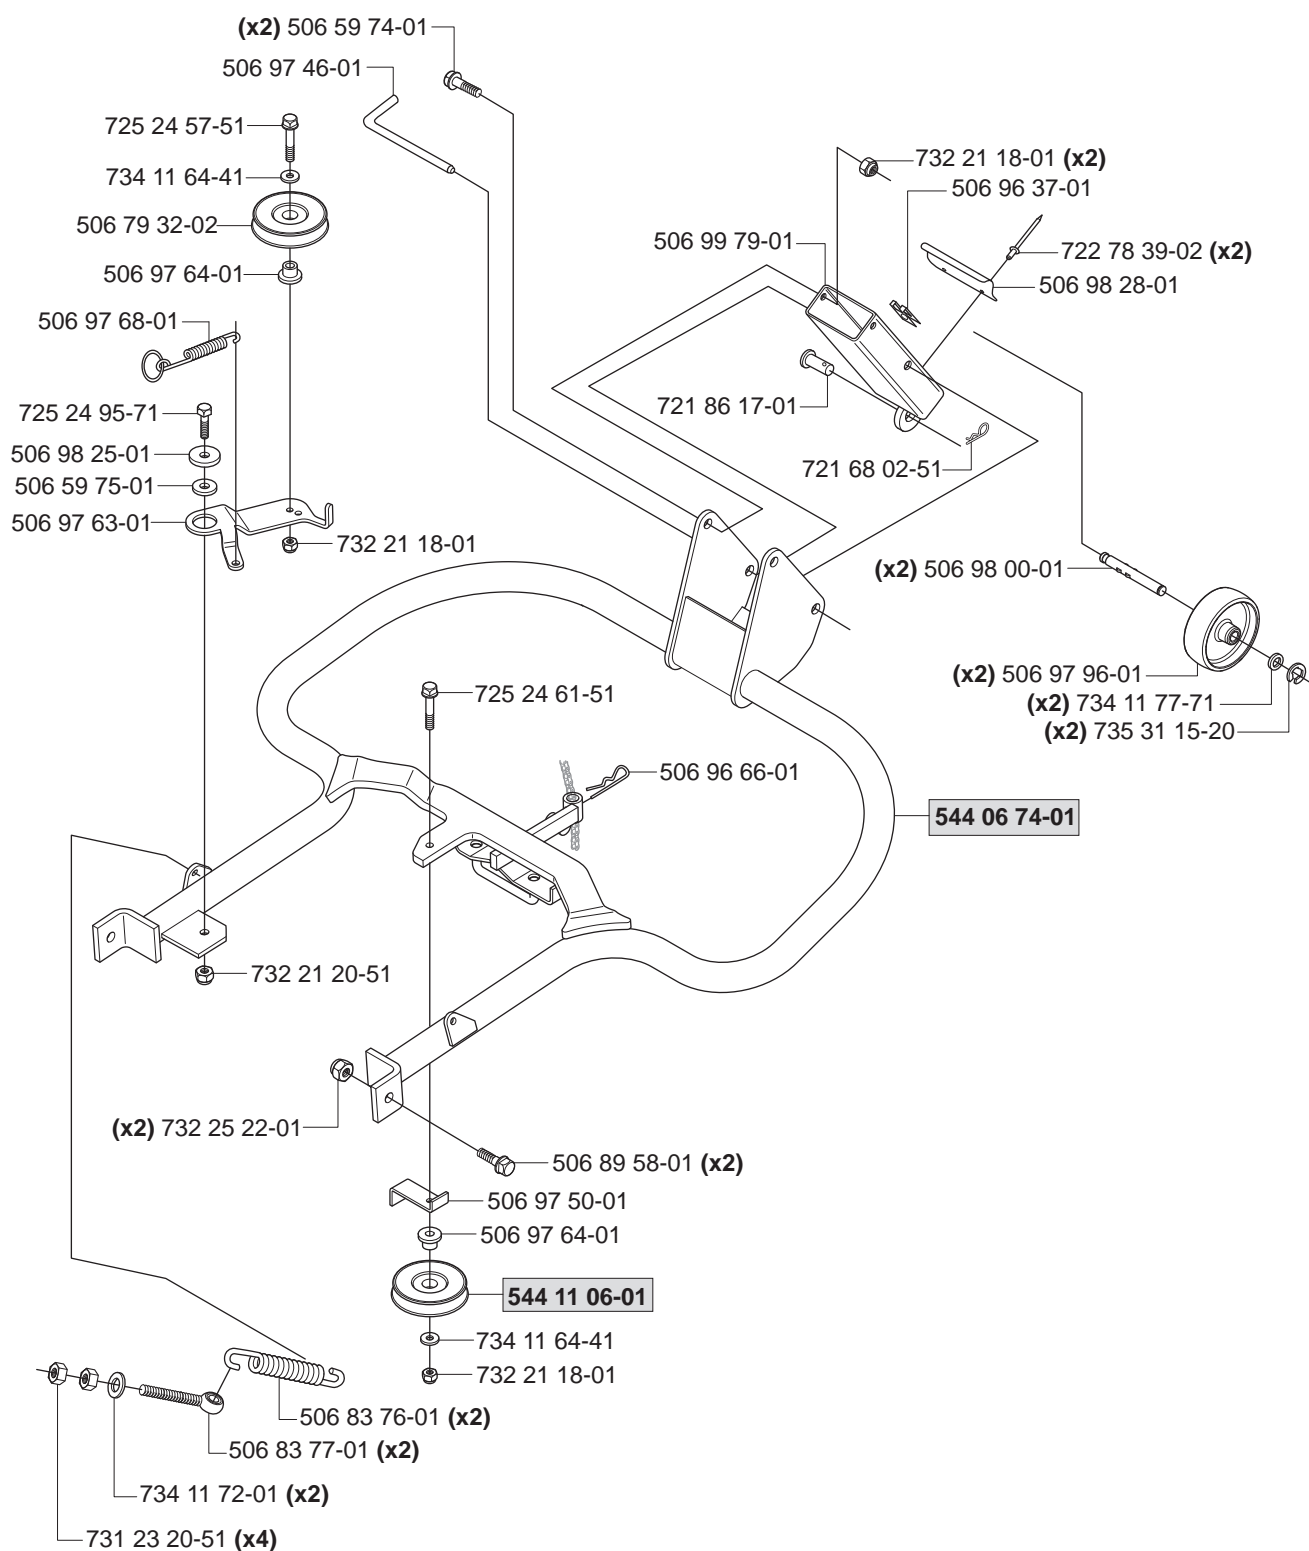

xxx xx xx-xx = New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

R

 Combi 94

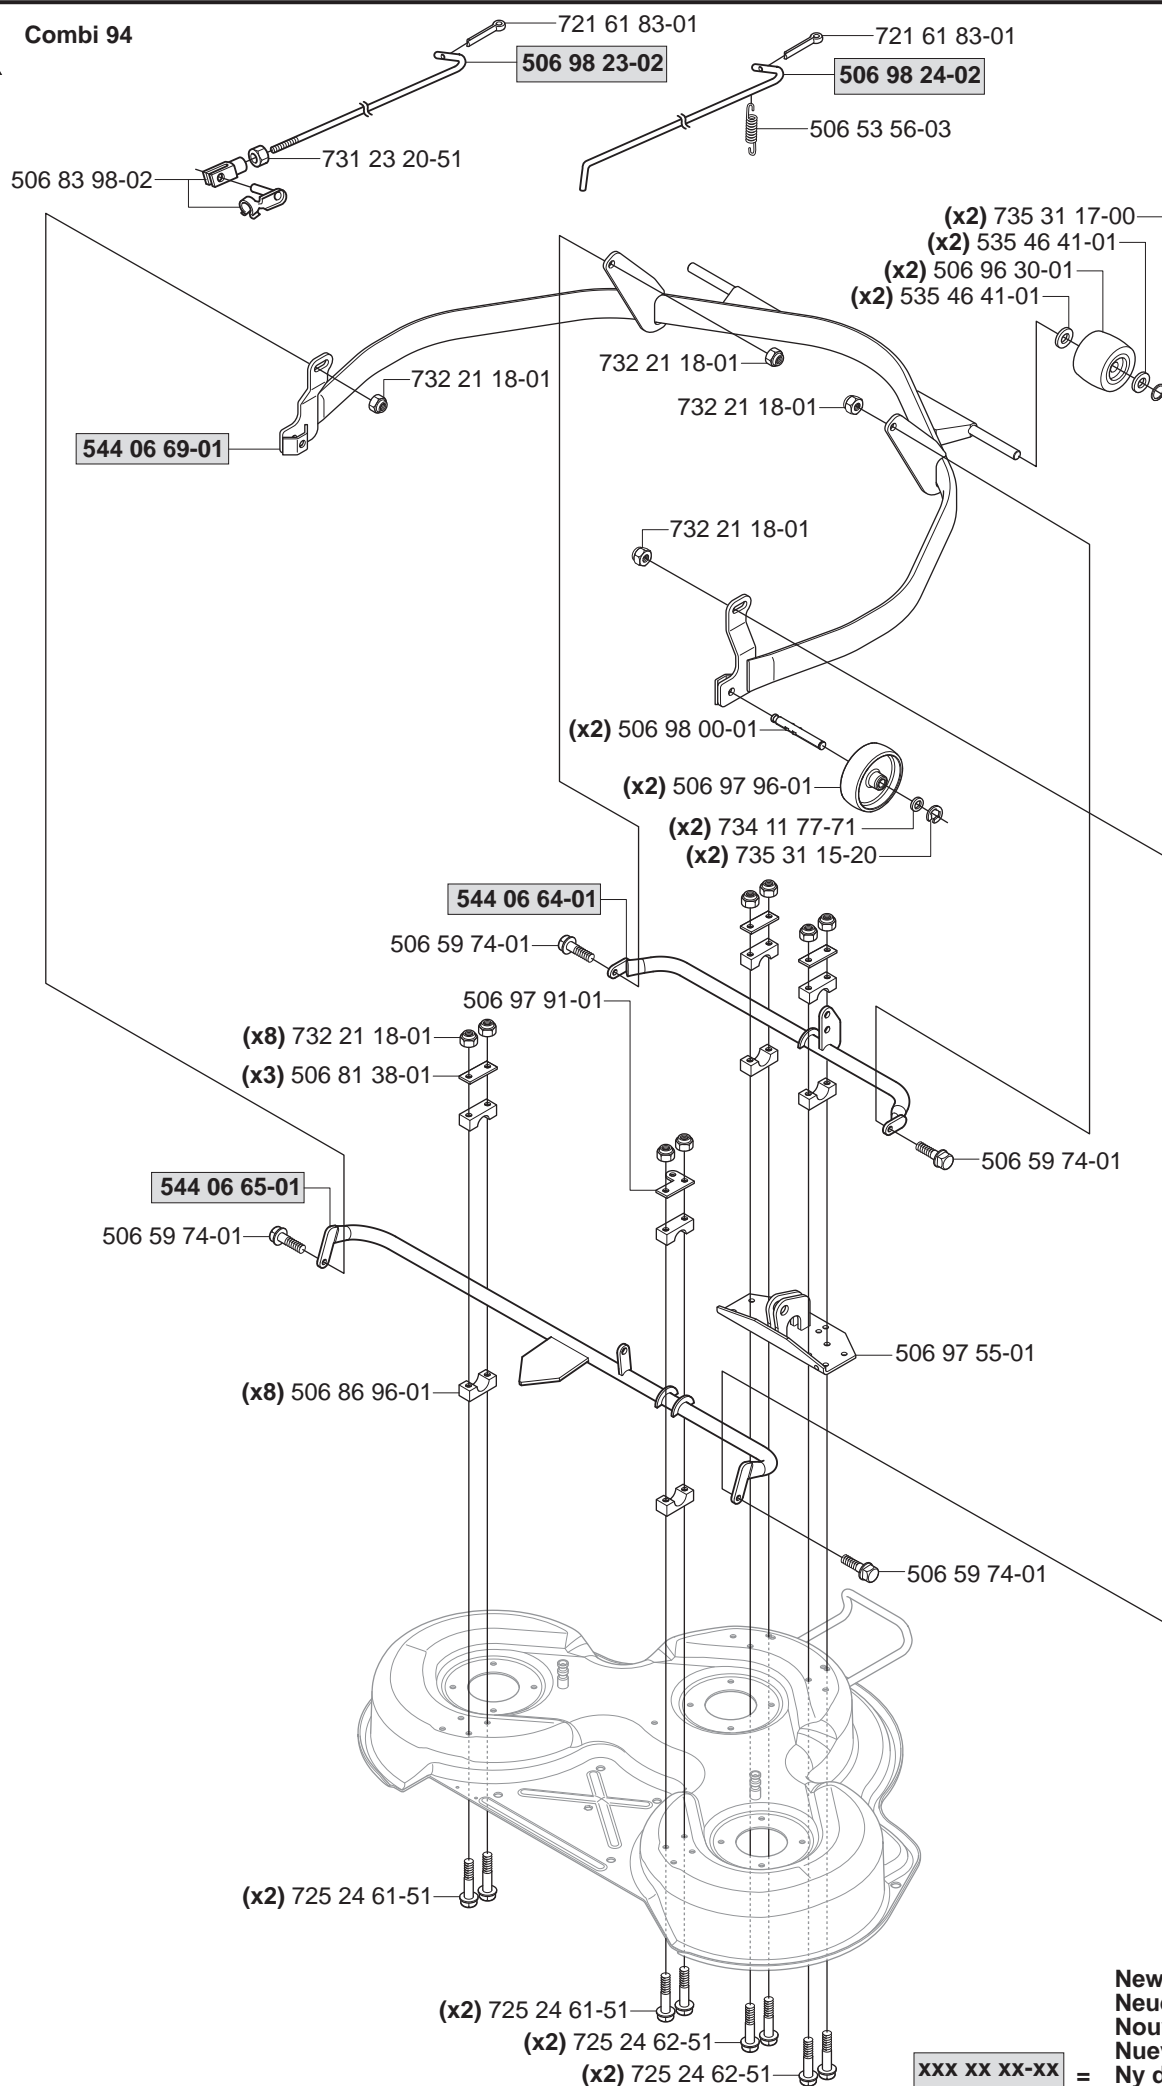


New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj

xxx xx xx-xx =

S

 Combi 94 compl 544 06 60-01

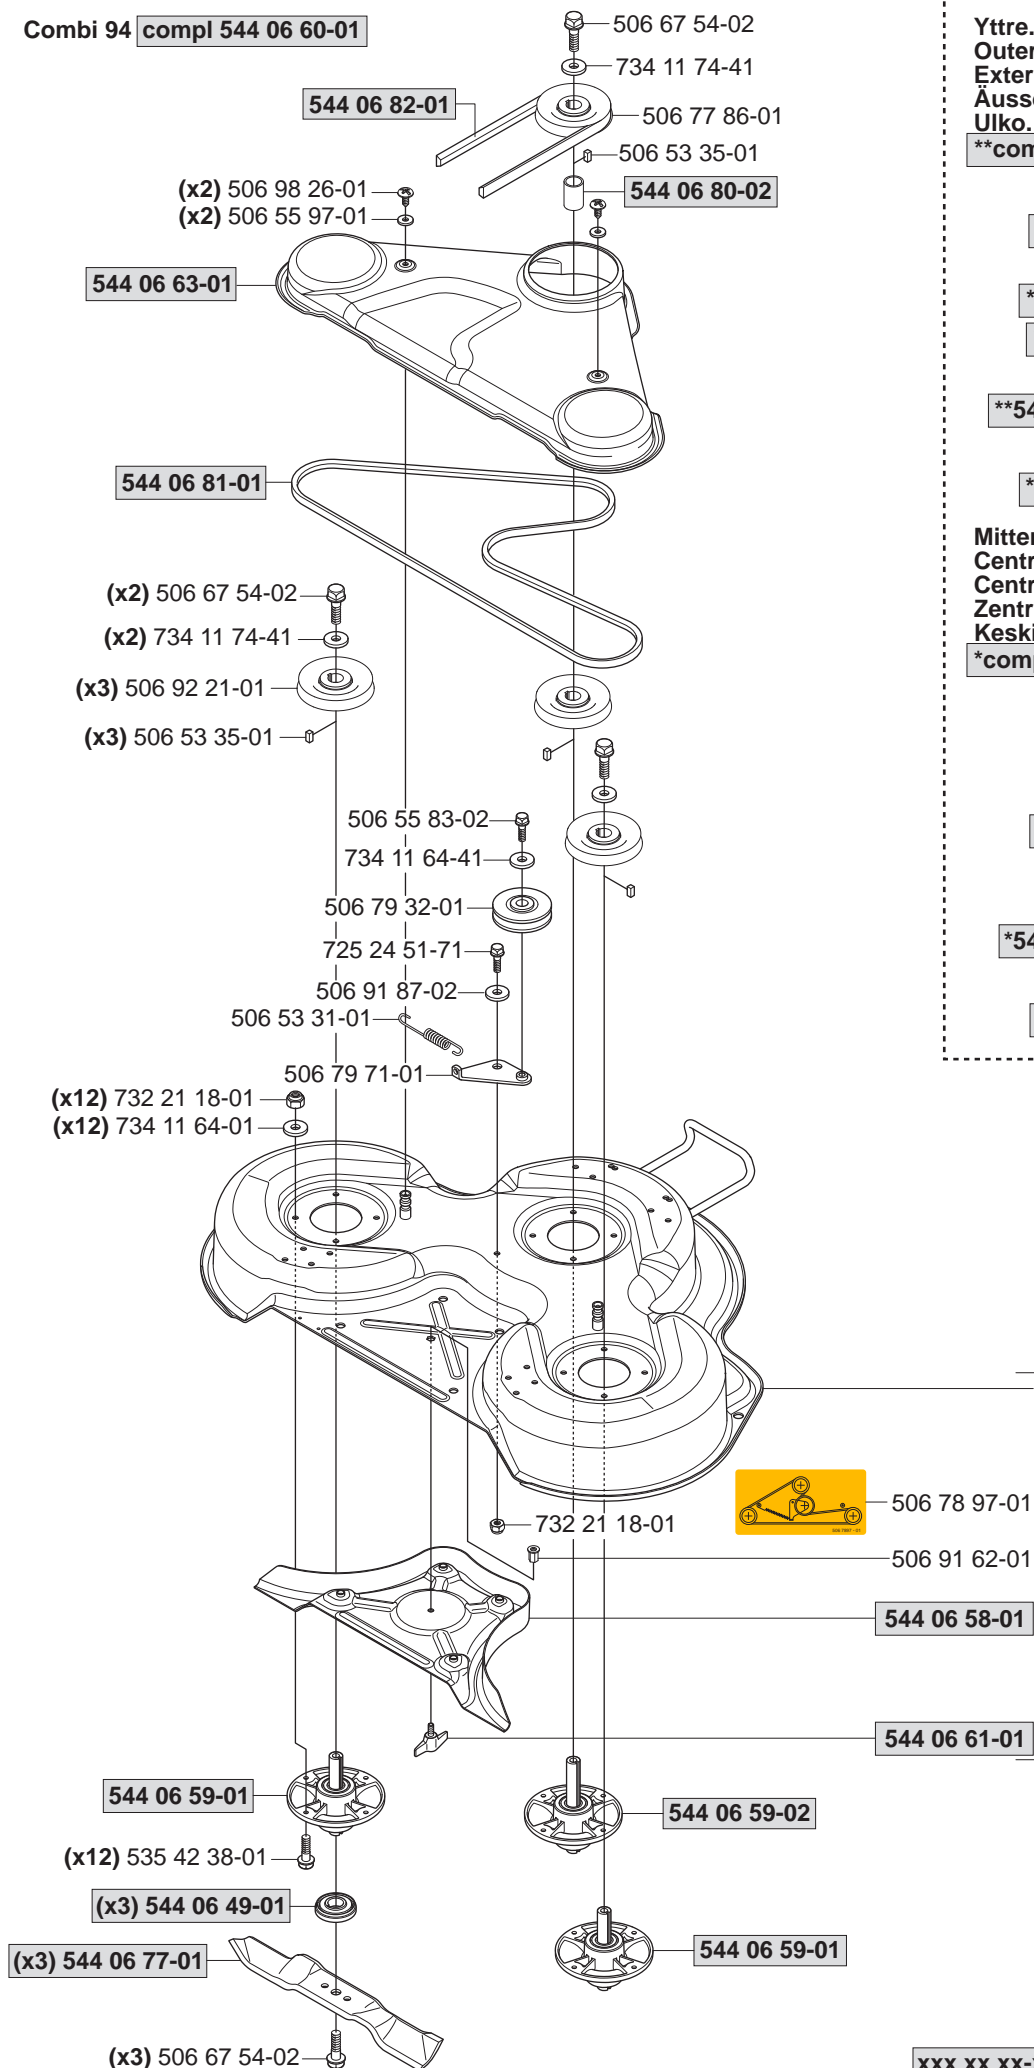

Yttre.
Outer.
Exterieur.
Äusser.
Ulko.

**compl 544 06 59-01 (x2)

**544 06 79-02

**738 23 04-34

**544 06 80-01

**544 06 78-01

**738 23 04-34

Mitten.
Centre.
Centre.
Zentrum.
Keski.

*compl 544 06 59-02

*544 06 79-01

*738 23 04-34

*544 06 80-01

*544 06 78-01

*738 23 04-34

xxx xx xx-xx =

New part,
Neues teil,
Nouvelle piece,
Nueva pieza,
Ny detalj