



Husqvarna[®]



PS875C

Contents

Introduction.....	2	Troubleshooting.....	5
Safety.....	3	Transportation, storage and disposal.....	5
Operation.....	4	Technical data.....	5

Introduction


Product description

The Husqvarna PS875C is a battery charger.

Intended use

Use the battery charger to charge batteries in applicable Husqvarna products. Do not use the battery charger for other tasks.

Battery charger overview

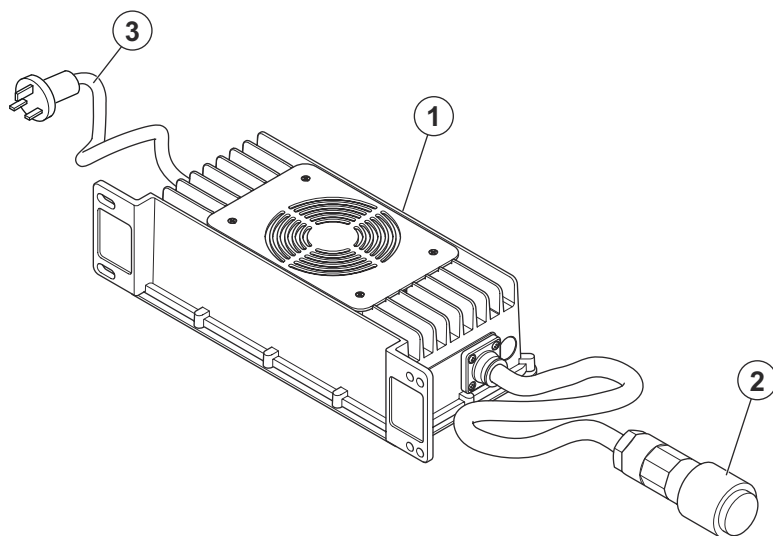

- 1. Battery charger
- 2. Charger plug
- 3. Power plug



Use and keep the battery charger indoors only.

Symbols on the battery charger



Read the operator's manual carefully and make sure that you understand the instructions before use.



Time/current characteristics of the fuse-link. The type of fuse is specified in *TECHNICAL DATA* on page 5 and on the label.



CAUTION: Do not open the battery charger. If the fuse is broken, speak to your Husqvarna servicing dealer.

Note: Other symbols/decals on the product refer to certification requirements for some markets.



Scannable code.

Safety

Safety definitions

Warnings, cautions, and notes are used to point out particularly important parts of the manual.



WARNING: Used if there is a risk of injury or death for the operator or bystanders if the instructions in the manual are not obeyed.



CAUTION: Used if there is a risk of damage to the product, other materials or the adjacent area if the instructions in the manual are not obeyed.

Note: Used to give more information that is necessary in a given situation.

Important safety instructions



WARNING: Read all safety warnings and all instructions. Failure to obey the warnings and instructions may result in electrical shock, fire and/or serious injury.

Note: Save all warnings and instructions.

- The power cord cannot be replaced. If the power cord is

damaged the battery charger should be scrapped.

- Regularly examine that the power cord is not damaged. Immediately disconnect the battery charger if the power cord is damaged.
- Only charge Husqvarna original batteries with the battery charger. If you have questions, speak to your Husqvarna dealer.
- Do not charge non-rechargeable batteries.
- Do not try to disassemble or repair the battery charger. All repairs are to be done by an approved dealer only. Do not use a damaged battery charger.
- Do not connect the battery charger terminals to metal objects.
- The power plug must only use a grounded mains socket.
- The power plug must only use a mains socket that has protection from rain.

- Use an approved and grounded mains socket that is not damaged.
- Do not lift the battery charger by the power cord. To disconnect the battery charger from a mains socket, pull out the power plug. Do not pull the power cord.
- Keep all cables and extension leads away from water, oil and sharp edges. Make sure that the power cord is not caught between doors, fences or equivalent.
- Do not use a damaged battery charger or battery.
- Do not use the battery charger when there is a risk of lightning.
- Only use the battery charger indoors.
- Do not use the battery charger near flammable

materials or materials that can cause corrosion. Pull out the power plug to the battery charger if there is smoke or fire.

- Keep the battery charger clean and away from sunlight.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Operation

To charge the battery



CAUTION: Use the battery charger in conditions where the temperature is between 0 °C (32 °F) and 40 °C (104 °F).



CAUTION: Only use the battery charger in a location that has a good airflow.

1. Connect the power plug to a grounded mains socket.



CAUTION: Only connect the battery charger to a mains socket that has the voltage and frequency specified on the rating plate.

2. Connect the charger plug to the socket for the battery charger on the product.
3. If possible, make sure that the product shows that the battery charges. For charge times, refer to the Operator's manual for the product.

Note: For the location of the charge indicator, refer to the Operator's manual for the product.

4. Wait until the battery is fully charged. The battery is fully charged when all the battery LED lights are solid. Refer to the Operator's manual for the product.

Note: The charge process will automatically stop when the battery is fully charged.

5. Disconnect the charger plug from the socket for the battery charger on the product.

6. Pull the power plug to disconnect the battery charger from the mains socket. Do not pull the power cord.

Troubleshooting

Troubleshooting

Symptoms	Cause	Solution
The battery does not charge.	The battery charger is not correctly connected to the mains outlet.	Connect the battery charger to a mains outlet.
	The battery charger is not correctly connected to the product.	Connect the battery charger to the product.
	The battery is damaged.	Disconnect the battery charger and speak to an approved servicing dealer.
	The battery charger or the power cord is damaged.	Disconnect the battery charger and speak to an approved servicing dealer.

Transportation, storage and disposal

Transportation and storage

- Safely attach the battery charger during transportation to prevent damage and accidents.
- Keep the battery charger away from metal objects, for example nails, screws or jewelry.
- Keep the battery charger in a locked area to prevent access for children or persons that are not approved.
- Put the battery charger in a dry, frost-free and clean area. The ambient temperature must be between 0 °C / 32 °F and 50 °C / 122 °F.
- Keep the battery charger away from sunlight.
- Clean the battery charger before storage.

- Disconnect the battery charger before storage.

Disposal

Husqvarna battery chargers are not domestic waste. Obey the disposal instructions.

- Obey the local disposal requirements and applicable regulations.
- Recycle the battery charger and package at an applicable disposal location.
- Speak to your local Husqvarna dealer for more information on how to recycle and discard the battery charger.

Technical data

TECHNICAL DATA

Battery charger	PS875C
Input voltage, V~	230–240
Input frequency, Hz	50
Input current, A	5
Maximum output current, A	15
Output Voltage, VDC	58.8

Battery charger	PS875C
Number of batteries that can be charged at the same time	1–3
Battery charger fuse ¹	T12A

TECHNICAL DATA

Battery	EM-5264Li	EM-5239Li
Type	Li-ion	Li-ion
Capacity	58.8 V, Max. 63.7 Ah	58.8 V, Max. 39.2 Ah

¹ Do not open the battery charger. If the fuse is broken, speak to your Husqvarna servicing dealer.



www.husqvarna.com

Original instructions



1144789-28



2026-09-25