
Z200/MZ Series Control Lever Extension Kit Instructions

KIT CONTENTS

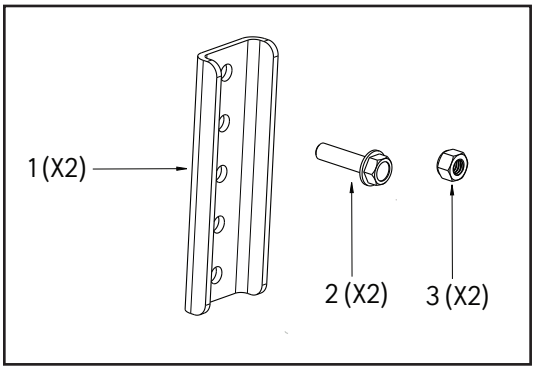


TOOLS NEEDED

½ inch wrench or socket (2 required)


TO INSTALL THE KIT

1. Determine if you need 1 or 2 inches of added control lever height and refer to the corresponding assembly illustration.
2. Use the wrenches to remove the existing hardware. Separate the upper and lower control levers. The hardware will be reused for assembly.
3. Install the lever extensions on the control levers as shown.
4. Tighten all hardware fully to 15-20 ft-lb (20-27 Nm).

1 INCH EXTENSION ASSEMBLY

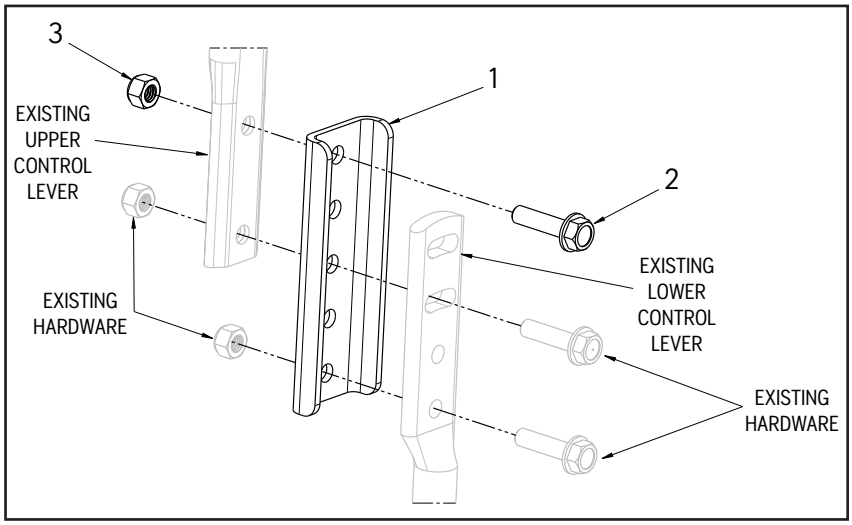

2 INCH EXTENSION ASSEMBLY

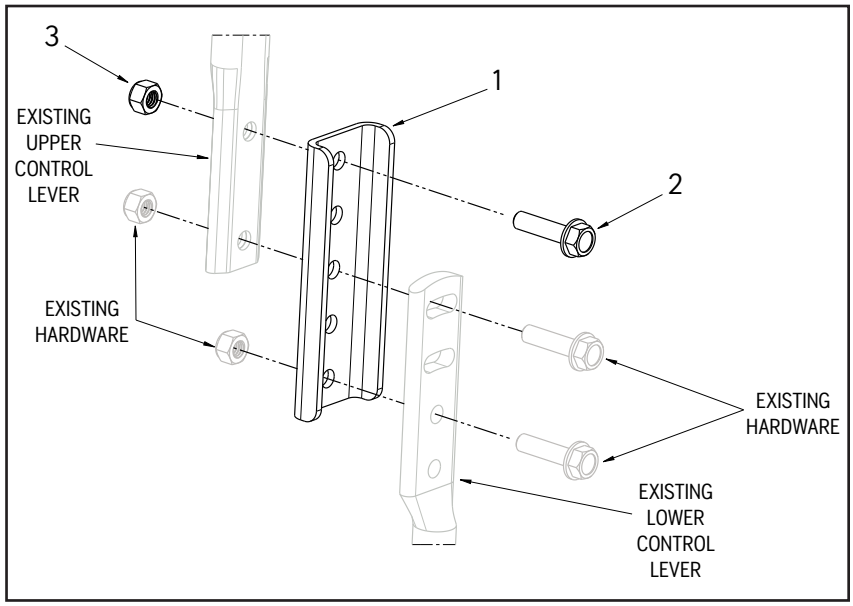

114 76 68-26
Rev. 1